













# SAFETY LABELING

## CHILDREN'S PRODUCTS

1. Plastic-bladed Scissors Without Functional Sharp Edges Warning (Without functional sharp edges or points)  
 CAUTION Contact with blade may cut hair. Handle with care. Use with adult supervision.
2. Scissors Without Functional Sharp Edges Warning (Without functional sharp edges or points)  
 CAUTION Contact with blade may cut hair. Handle with care. Use with adult supervision.
3. Sharp Edge Warning – Scissors (Ages 12 and under)  
 CAUTION Cut Hazard: Product has functional sharp edges. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. Use with adult supervision.
4. Sharp Edge Warning – Scissors (Ages 13 and over)  
 CAUTION Cut Hazard: Product has functional sharp edges. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. Use with adult supervision. Not for ages 12 and under.
5. Sharp Point Warning – Compass (Ages 12 and under)  
 CAUTION Cut Hazard: Product has functional sharp points. Contact may result in injury. Always keep points away from fingers and body. Handle with care. Use with adult supervision.
6. Sharp Edge and Point Warning – Scissors with Sharp Points (Ages 12 and under)  
 CAUTION Cut Hazard: Product has functional sharp edges and points. Contact may result in injury. Always keep edges and points away from fingers and body. Handle with care. Use with adult supervision.
7. Kids' Products Choking Warning (Ages 12 and under)  
 WARNING Choking Hazard: Small parts. Not intended for children under 3 years. Handle with care. Use with adult supervision.
8. Plastic Bag Suffocation Warning  
 WARNING To avoid danger of suffocation, keep this plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. The plastic bag could block nose and mouth and prevent breathing. This bag is not a toy.


## NON-CHILDREN'S PRODUCTS

9. General Blade Warning (Not for Children's Products)  
 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. **Keep out of reach of children.**
10. Paper Trimmer Warning  
 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. Use approved eye protection to protect from debris. **Keep out of reach of children.**
11. Rotary Blade Warning  
 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. **Keep out of reach of children.**
12. Cuts Plus More Warning (Ultimate Household Scissors)  
 CAUTION Cut Hazard: Sharp Blades. Improper use, chiseling, ice picking, prying, applying force onto back of blade, or contact may result in injury. Always keep blades away from fingers and body. Do not use if blades are dull, bent, chipped, loose at its pivot or otherwise damaged or if the handle is broken or loose. Handle with care. Do not pick it up by the blade. When not in use, store in its sheath or a safe place. **Keep out of reach of children.**


### 13. Giftwrap Cutter Warning

 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Do not use if damaged. Handle with care. **Keep out of reach of children.**


### 14. Hand Drill Warning

 CAUTION Cut Hazard: Product uses a sharp drill. Contact may result in injury. Always keep points away from fingers & body. Handle with Care. Use for General Craft Purposes Only. **Keep out of reach of children.**


### 15. Punch Warning

 CAUTION Cut/Pinch Hazard: Has functional sharp edges. Avoid pinch points. Contact may result in injury. Always keep fingers and body away from punch edges. Handle with Care. Use with adult supervision.


### 16. Garden Tools

 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. Use approved eye protection to protect from debris. **Keep out of reach of children.**


### 17. General Knife Warning


 CAUTION Cut Hazard: Sharp Blades. Improper use, chiseling, ice picking, prying, applying force onto back of blade, or contact may result in injury. Always keep blades away from fingers and body. Do not use if damaged or blade is loose. Handle with care. If not in use, store in its sheath or safe place. **Keep out of reach of children.**

### 18. Garden Multi-Snip Warning


 CAUTION Any use of the Multi-Snip other than for cutting is considered improper use and may result in injury or damage. Do not use Multi-Snip as a screwdriver or for prying. Cut Hazard: The blades are sharp and contact may result in injury. During use, direct the sharp point and edges away from you and others. Do not pick it up by the blade. Do not use Multi-Snip if blades are dull, bent, chipped, loose at its pivot or otherwise damaged or if the handle is broken or loose. When the Multi-Snip is not in use, store in its sheath or a safe place. **Keep out of reach of children.**

### 19. Tree Pruners & Pruning Stik


 CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care. Use approved eye protection to protect from debris. Do not stand on a ladder when using. Do not stand directly under branch being cut. Store in a safe place. **Keep out of reach of children.**

 WARNING Shock Hazard: Risk of electrical shock. Never use near wires or power lines. **Keep out of reach of children.** Do not extend inner white pole beyond red mark.


### 20. Axe & Hatchet Warning

 CAUTION For User and Bystanders. Use with approved eye protection to protect from debris. Flying debris can result in eye or other injury. Use cutting edge for cutting wood only. Contact with hard object can result in blade or head chipping. Do not use to strike with or against another tool, hardened nail, or other object. Do not use if blade is dull, chipped, or otherwise damaged or if handle is broken or loose. Blade is sharp. Handle with care. Contact with blade can result in injury. When not in use, store in a safe place. **Keep out of reach of children.**


### 21. Hand Saw Warning (Non Folding)

 CAUTION Cut Hazard: Sharp Blades. Improper use or contact may result in injury. Always keep blades away from fingers and body. If saw blade jams while cutting, use extreme care when dislodging it. Do not use if damaged or if handle is broken or loose. Handle with care. **Keep out of reach of children.**


### 22. Hand Saw Warning (Folding; with Sheath)

 CAUTION Cut Hazard: Sharp Blades. Improper use, applying force onto back of blade, or contact may result in injury. Always keep blades away from fingers and body. If saw blade jams while cutting, use extreme care when dislodging it. Do not use if damaged or if handle is broken or loose. Handle with care. If not in use, store in its sheath or safe place. **Keep out of reach of children.**


### 23. Cut and Grab Lopper Warning

-  CAUTION Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with Care. Use approved eye protection to protect from debris. For branches 1” in diameter or larger, maximum branch cut length should not exceed 2 feet. **Keep out of reach of children.**

### 24. Sharpener Warning




-  CAUTION Cut Hazard: Blades become sharper. Keep fingers away from blade during sharpening. Contact may result in injury. Handle with Care. **Keep out of reach of children.**

### 25. Machete Warning


-  CAUTION Any use of the machete other than for cutting is considered improper use, and may result in injury or damage. Do not use the machete for prying. Handle with care. Cut Hazard: The blades are sharp and contact may result in injury. During use, direct the sharp point and edges away from you and others. Do not pick it up by the blade. Always secure handle lanyard to hand or wrist to prevent contact with blade. Do not use the machete if its blades are dull, bent, chipped or otherwise damaged or if the handle is broken or loose. When using the Machete, wear protective clothing and safety gear to protect your eyes, hands, arms, legs, and feet. When the machete is not in use, store in its sheath or a safe place. **Keep out of reach of children.**

### 26. Rain Barrel Instructions Warning

#### **Important – read carefully before installation**


-  WARNING Drowning Hazard – Always securely attach the rain barrel cover to avoid a child drowning. Never use a rain barrel without the cover securely attached or with a damaged, cracked, warped, or broken cover. Never permit children to play on, in, or near a rain barrel. Never place rain barrel near a deck, stairs, chair, or other structures or items that would allow a child to climb above, onto, or into the rain barrel.
-  WARNING Water Contamination Hazard – Never let people or animals drink water from the rain barrel. Never use for cooking or washing or any way that may result in ingestion of the water. Water in rain barrel may become stagnant or contaminated. Drinking rain barrel water may cause serious illness or death. Use rain barrel water only for watering plants or outdoor cleaning uses.
-  WARNING Tipping Hazard – Rain barrel may tip over and injure people or damage property if not properly set up. Never place rain barrel on any surface that is not flat and even. Always use a solid surface under the rain barrel. The placement and preparation of the area where your rain barrel will stand must be level and provide solid support.

WARNING Electrical Hazard – If downspout contains heating cables, there is a potential electrocution or fire hazard during installation.

-  CAUTION Installation Hazards – Rain barrels are for water collection and outdoor use only. No other uses are recommended. Downspout edges may be sharp. Wear protective gloves when cutting and handling downspouts to avoid cuts and scratches. Always wear safety glasses when doing cutting or drilling to prevent eye injuries. Protect the home’s siding with a sheet of wood inserted between the downspout and the siding to prevent damage.

Please read through all instructions before beginning the installation of this product. If improperly installed and/or maintained, there is potential for damage to your home or possible injury or death. Fiskars Brands, Inc. is not responsible for any damages or injuries caused as a result of or by improper installation.

Retain “Installation Guide” for future reference.

-  WARNING Children can fall into rain barrel and drown. Keep children away from rain barrel with even a small amount of liquid. Always securely attach the rain barrel cover.

## 27. StaySharp Reel Mower Warning

*(Front Blade Warning)*

### WARNING

Sharp blades, contact may result in injury  
Keep hands and feet away from moving blades

*(Handle Warning )*

### CAUTION

Read manual thoroughly  
Do not use mower if in poor health  
Do not operate with missing or damaged guards  
Always wear safety glasses, gloves & proper shoes  
Do not use mower in areas other than grass  
Always remove debris from path of mower  
Use care mowing wet grass or on slopes - slip hazard  
Use safe lifting practices when moving mower  
Do not allow children under 12 to use mower  
Do not operate around children, adults or pets


*(Carton Lifting Warning )*

### CAUTION

Carton Weighs: \_\_\_\_ lbs.  
Use safe lifting practices when moving mower

## 28. Composter Package Warning


 CAUTION Never permit children to play on, in, or near composter. For outdoor use only. Keep Children Away.


 CAUTION Never use a composter if damaged. Always place on a solid flat surface. Never place composter near a deck, stairs or other structures/items. Keep Children Away.


Composting Hazards: Research data warns of the potential of fire, bacteria, fungi, and other hazards (insect & animal bites) related to compost mismanagement. Practice good personal hygiene (use gloves/wash hands) when handling compost.

Please read and retain all instructions before using this product. If improperly installed and/or maintained, there is potential for damage or possible injury or death. Fiskars Brands, Inc. is not responsible for any damages or injuries caused as a result of or by improper installation and/or composting use.


## 29. Composter Instructions Warnings

 WARNING Entrapment Hazard: Never permit children to play on, in, or near a composter. Never use a composter without the cover securely attached or with a damaged, cracked, warped, or broken cover. Never place composter near a deck, stairs, chair, or other structures or items that would allow a child to climb above, onto, or into the composter. Keep Children Away.

 WARNING Tipping Hazard: Composter may tip over and injure people or cause damage to property if not properly set up. Never place composter on any surface that is not flat and even. Always use a solid surface under the composter. For outdoor use only.

 CAUTION Composting Hazard: Research materials warn about the potential of fire, bacteria, fungi, and other hazards (insect & animal bites) associated with mismanagement of compost. Avoid certain inputs to the compost pile such as raw poultry or meat wastes, pet feces, and plate scrapings from people who are ill. Consider managing pathogens. Maintain proper accepted methods for small scale compost piles to prevent the potential of fire. If possible, allow composts that are produced in a small scale setting to age for at least a year before use.

*(Composter Instructions Warnings continued)*

 CAUTION Health Hazard: Practice good personal hygiene when handling compost. Proper personal sanitation is the most effective method for controlling the impact of any pathogens that may be in the compost. Wash hands after handling compost and/or use gloves. If the compost is particularly dusty, watering is an option. Persons with allergic reactions, weakened immune systems, or other medical conditions should use caution when handling compost.

Please read through all instructions before beginning the installation of this product. If improperly installed and/or maintained, there is potential for damage or possible injury or death. Fiskars Brands, Inc. is not responsible for any damages or injuries caused as a result of or by improper installation and/or Composting use. Retain this "Instruction Guide" for future reference.